


Model 211

Modification notes

10.06.2020	New maintenance operation at service 4: Rear axle: Perform oil change.	Model 211.077/277 with engine 156 with code 471 (Mechanical locking differential)	
------------	---	--	--

- ☐ **Service A**
- ☐ **Service B**
- ☐ Plus package
- ☐ For every service (equipment specific)
- ☐ Service 2 at every service B (not country-specific)
- ☐ Service 3 every 20,000 km/3 years
- ☐ Service 3 every 20,000 km/3 years (not country-specific)
- ☐ Service 3 every 60,000 km/3 years
- ☐ Service 4 every 20,000 km/2 years
- ☐ Service 5 every 20,000 km/2 years
- ☐ Service 6 every 2 years
- ☐ Service 7 Every 2 years
- ☐ Service 8 every 50,000 km/3 years
- ☐ Service 9 every 20,000 km/3 years
- ☐ Service 9 every 20,000 km/3 years (not country-specific)
- ☐ Service 9 every 40,000 km/3 years (not country-specific)
- ☐ Service 9 every 60,000 km/3 years
- ☐ Service 10 every 40,000 km/3 years
- ☐ Service 10 every 60,000 km/3 years
- ☐ Service 10 every 80,000 km/4 years
- ☐ Service 11 every 20,000 km/3 years (not country-specific)
- ☐ Service 12 every 80,000 km/6 years
- ☐ Service 12 every 200,000 km/10 years
- ☐ Service 12 every 200,000 km/10 years (not country-specific)
- ☐ Service 13 At every service
- ☐ Service 13 At every service (not country-specific)
- ☐ Service 20 every 60,000 km/4 years

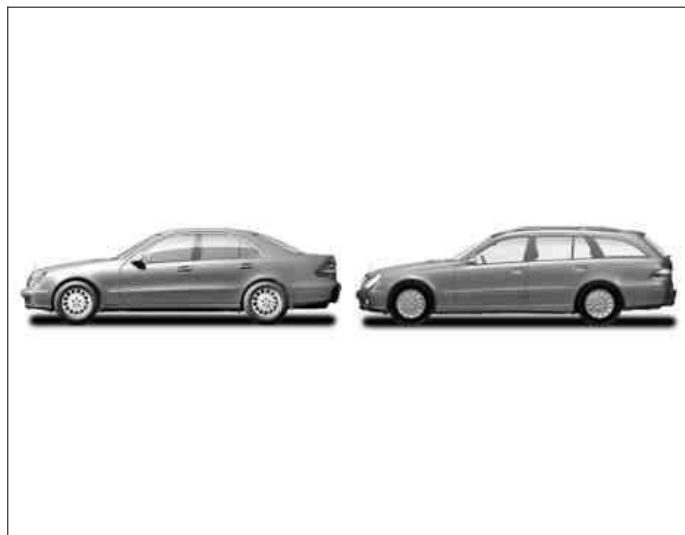

P00.00-4890-11

Customer.....

Order number.....

VIN/license plate number.....

Current mileage.....

Completion time/date.....

Notes/explanations.....

The following activities are hereby confirmed:

- Completion of relevant service operations

Signature.....

A	B	Input condition not OK:		⊗
Completed				
☒	☒			
⬇	⬇	⬇		
☐	☐	Service reception The pre-order for service on the vehicle is available in completed form.		○
		<i>i</i> To be performed by the Service Advisor (where market-specific conditions require). Fully process all acceptance items and the maintenance items listed in the service sheet, only then is the service scope completely performed.		
☐	☐	Brake system Perform brake test and enter result in table.		○
		AP42.00-P-4290BA		
☐	☐	Vehicle exterior Check condition of vehicle exterior.		○
		AP60.00-P-0050T		
☐	☐	Check condition of windshield.		○
		AP67.10-P-6750A		
☐	☐	Check condition of wiper blades.		○
		AP82.30-P-8253G		
	☐	Check exterior lighting for proper operation.		○
		AP82.10-P-8252EW		
	☐	Check function of headlamp range adjustment.		○
		AP82.10-P-8250EW		
	☐	Check and correct headlamp adjustment.		○
		AP82.10-P-8260T		
		<i>i</i> Invoice headlamp adjustment as an additional operation on vehicles with level control or xenon headlamps.		
	☐	Vehicle interior Check windshield wipers, windshield washer system and headlamp cleaning system for proper operation.		○
		AP82.30-P-8252A		
☐	☐	Sensotronic Brake Control (SBC™): Check acoustic warning system.		○
		AP54.30-P-5450A		
☐	☐	Sensotronic Brake Control (SBC™): Check hydraulic unit.		○
		AP42.50-P-4259A		
☐	☐	Check warning and function indicator lamps in instrument cluster.		○
		AP54.30-P-5451T		
☐	☐	Read out map data version from navigation system, check update.		
		AP82.85-P-8251C		
	☐	Read out and note maintenance data from instrument cluster, then reset service indicator.		
		AP00.20-P-0043T		

☐	☐	Engine compartment Brake system: Check fluid level.		○	
	☐	Power steering system: Check fluid level.		○	AP42.10-P-4210Z
	☐	Replace fuel filter.			AP46.00-P-4612T
			Not country-specific. ENGINE 642 with CODE U41 (Fuel/ water separator and lubrication package)		AP47.20-P-0780TI
			Engine 646 with code 921 (Vegetable oil methyl ester version) when operating with VOME fuel (vegetable oil methyl ester)		AP47.20-P-0780T
			Engine 646, 647, 648 with code U41 (Fuel/water separator and lubrication package)		AP47.20-P-0780T
			 Replace fuel filter, invoice as additional operation.		
	☐	Replace spark plugs.	 ENGINE 271 with CODE 924 (Bivalent natural gas drive)  Replace spark plugs, invoice as an additional operation.		AP15.10-P-1580P
	☐	Check all visible parts in engine compartment for damage and fluid loss.		○	
	☐	Check poly-V-belt in visible area for signs of wear.	 Engine 112, 113, 271 ENGINE 156, 272, 273	○	AP00.20-P-0055EW
	☐	Check poly-V-belt in visible area for signs of wear.	 Not country-specific. Engine 628, 646, 647, 648 Engine 629 Engine 642	○	AP13.22-P-1352Z AP13.22-P-1352TS AP13.22-P-1352Z AP13.22-P-1352TJ AP13.22-P-1352TI
☐	☐	Underside of vehicle Check all visible parts of vehicle underside for damage and fluid loss.		○	AP00.20-P-0054EW
			 The country-specific regulations for mobility and body shell complaints apply.		
	☐	Check tie rod and drag link ball joints for play, check boots.		○	AP46.00-P-4653F
	☐	Check front axle joints for play, check boots.		○	AP33.20-P-3353BA
	☐	Check condition of propeller shaft and flex disks.		○	AP41.10-P-4152Z
	☐	Assess condition and tire tread depth of tires and enter into table.		○	AP40.10-P-4052B
	☐	Assess condition of brake pads and enter into table.		○	AP42.10-P-4252T
	☐	Assess condition of brake disks and enter into table.		○	AP42.10-P-4256EW
	☐	Check tires for damage and crack formation, and enter result in table.		○	AP40.10-P-4051Z
☐	☐	Tires Plus package Correct tire pressure and enter set tire pressure in table.		○	AP40.15-P-4061B
		Trunk Plus package			

☐	☐	Check/correct spare wheel tire pressure and enter set tire pressure in table.		○	
			Vehicles with spare wheel.		AP40.15-P-4061B
☐	☐	Check TIREFIT tire sealant.		○	
			Vehicles with TIREFIT.		AP40.10-P-4054R
			Enter expiration date here:		
			Replace TIREFIT, invoice as additional operation.		
☐	☐	Check trunk lighting for proper operation.		○	
☐	☐	Engine compartment Plus package Windshield washer system: Check/correct fluid level.			AP82.35-P-8210N
			When using cleaning compounds for summer/winter, and depending on the ambient temperature, observe the mixing ratio. If the fill level is too low, ↓ add cleaning compound.		
			Subject to a separate invoice.		
☐	☐	Vehicle interior Plus package Check lamps in instrument cluster and interior lighting for proper operation.		○	AP54.30-P-5453T
☐	☐	Check first-aid kit (soft sided).		○	AP68.00-P-6850EW
			Enter expiration date here:		
			Replace first aid bag, invoice as an additional operation.		
☐	☐	Vehicle interior For every service (equipment specific) Replace battery for KEYLESS-GO key.			
			After consultation with customer. With code 889 (KEYLESS-GO)		
	☐	Vehicle exterior Service 2 at every service B (not country-specific) Trailer hitch: Check condition and operation.		○	
			With code 550 (Trailer hitch)		AP31.11-P-3152T
☐	☐	Engine compartment Service 3 every 20,000 km/3 years Replace air filter element.			
			Engine 113.990, 156 Engine 156		AP09.10-P-0980TMG
☐	☐	Engine compartment Service 3 every 20,000 km/3 years (not country-specific) Replace air filter element.			
			Engine 642 in MODEL 211.### #A up to 953599		AP09.10-P-0980GZD
☐	☐	Engine compartment Service 3 every 60,000 km/3 years Compressor: Replace poly-V-belt.			
			ENGINE 113.990		AP13.22-P-1381R
		Engine compartment Service 4 every 20,000 km/2 years			

☐	☐	Replace activated charcoal particle filter.	----- With code 805 (Model year 2005) or code 806 (Model year 2006) or code 807 (Model year 2007)	AP83.00-P-8384T
☐	☐	Replace activated charcoal filter.	----- With code 808 (Model year 2008)	AP83.00-P-8384T
☐	☐	Underside of vehicle Service 4 every 20,000 km/2 years Rear axle: Change oil.	----- Model 211.077/277 with code 471 (Manual locking differential)	AP35.00-P-3501CMG
☐	☐	Engine compartment Service 5 every 20,000 km/2 years Replace dust filter.	----- With code 802 (Model year 2002) or code 803 (Model year 2003) or code 804 (Model year 2004)	AP83.00-P-8381T
☐	☐	Replace activated charcoal particle filter.	----- With code 805 (Model year 2005) or code 806 (Model year 2006) or code 807 (Model year 2007)	AP83.00-P-8384T
☐	☐	Vehicle interior Service 5 every 20,000 km/2 years Replace activated charcoal filter.	----- With code 802 (Model year 2002) or code 803 (Model year 2003) or code 804 (Model year 2004) with code 581 (Automatic air conditioning)	AP83.00-P-8382F
☐	☐	Engine compartment Service 6 every 2 years Brake system: Replace brake fluid.	----- With Sensotronic Brake Control (SBC™) Except Sensotronic Brake Control (SBC™)	AP42.00-P-4280R AP42.00-P-4280T
☐	☐	Vehicle interior Service 7 Every 2 years Sliding roof: Clean and lubricate slide rails and slide shoes.	----- With code 414 (Glass version electric sliding roof)	AP77.20-P-7731A
☐	☐	Vehicle interior Service 8 every 50,000 km/3 years Panoramic sliding sunroof: Clean and lubricate guide mechanism.	----- With code 413 (Panoramic sliding sunroof/glass roof)	AP77.20-P-7732PB
☐	☐	Engine compartment Service 9 every 20,000 km/3 years Replace air filter element.	----- Engine 112, 113.967/969, 271, 272, 273 Engine 272, 273	AP09.10-P-0980TS
☐	☐	Engine compartment Service 9 every 20,000 km/3 years (not country- specific) Replace air filter element.	----- ENGINE 628 Engine 629 Engine 642 in model 211.### #A as of 953600	AP09.10-P-0980TA AP09.10-P-0980TJ AP09.10-P-0980GZD
☐	☐	Engine compartment Service 9 every 40,000 km/3 years (not country- specific) Replace fuel filter.	-----	

			ENGINE 628 Engine 629 engine 642 except code U41 (fuel/ water separator and lubrication package) Engine 646 with code 921 (Vegetable oil methyl ester version) when operating with diesel fuel Engine 646 except code 921 (Vegetable oil methyl ester version) Engine 646, 647, 648 except code U41 (Fuel/water separator and lubrication package)	AP47.20-P-0780TD AP47.20-P-0780SXJ AP47.20-P-0780TI AP47.20-P-0780T AP47.20-P-0780T AP47.20-P-0780T
☐	☐	Engine compartment Service 9 every 60,000 km/3 years Replace spark plugs.	----- ENGINE 271 except CODE 924 (Bivalent natural gas drive)	AP15.10-P-1580P
☐	☐	Engine compartment Service 10 every 40,000 km/3 years Replace spark plugs.	----- ENGINE 272.985	AP15.10-P-1580TS
☐	☐	Engine compartment Service 10 every 60,000 km/3 years Replace spark plugs.	----- Engine 112, 113 Engine 156 Engine 272.922/943/944/964/972, engine 273	AP15.10-P-1580AB AP15.10-P-1580TMG AP15.10-P-1580TS
☐	☐	Vehicle interior Service 10 every 80,000 km/4 years Replace fuel filter.	----- ENGINE 272.985	AP47.20-P-0780TC
☐	☐	Engine compartment Service 11 every 20,000 km/3 years (not country- specific) Replace air filter element.	----- Engines 646, 647, 648	AP09.10-P-0980T
☐	☐	Vehicle interior Service 12 every 80,000 km/6 years Replace fuel filter.	----- Engine 112, 113, 156, 271, 272 (except 272.985), 273	AP47.20-P-0780TC
☐	☐	Underside of vehicle Service 12 every 200,000 km/10 years Replace coolant in main circuit.	----- Engine 112, 113, 271, 272, 273 Engine 156	AP20.00-P-2080DA AP20.00-P-2080TMG
☐	☐	Underside of vehicle Service 12 every 200,000 km/10 years (not country- specific) Replace coolant in main circuit.	----- engine 628, 629, 642, 646, 647, 648	AP20.00-P-2080BA
☐	☐	Engine compartment Service 13 At every service Engine: Change oil and oil filter.	----- Engine 112 ENGINE 113.967 Engine 113.969 ENGINE 113.990 Engine 156 Engine 271 Engine 272 Engine 273	AP18.00-P-0101AE AP18.00-P-0101GH AP18.00-P-0101AF AP18.00-P-0101R AP18.00-P-0101TMG AP18.00-P-0101AB AP18.00-P-0101PIT AP18.00-P-0101SX
		Engine compartment Service 13 At every service (not country-specific)		

☐	☐	Engine: Change oil and oil filter.	----- ENGINE 628 Engine 629 Engine 642 Engine 646 Engine 647 Engine 648	AP18.00-P-0101TD AP18.00-P-0101TJ AP18.00-P-0101PI AP18.00-P-0101P AP18.00-P-0101TCC AP18.00-P-0101TC
☐	☐	Underside of vehicle Service 20 every 60,000 km/4 years Automatic transmission: Change oil and oil filter.	----- Transmission 722.6 Transmission 722.9	AP27.00-P-2702I AP27.00-P-2702W
☐	☐	Transfer case: Change oil.	----- With code M005 (Vehicles with 4MATIC/all-wheel drive)	AP28.00-P-2801P

Brake values

	Left	Right
Front		
Rear		
Parking brake		

Condition of tires/tire tread depth (Mark applicable field with X or optionally, enter tire tread depth)

	Right front	Left front	Right rear	Left rear
Condition and tire tread depth OK.				
Wear limit reached / exceeded				
Unusual wear pattern				
Max. tire age / mileage reached / exceeded (special protection only)				

Condition of brake linings (Mark applicable field with X)

	Right front	Left front	Right rear	Left rear
Condition in visible area OK.				
Wear limit reached / exceeded				
Soiled (oil, grease, etc.)/damaged				

Condition of brake disks (Mark applicable field with X)

	Right front	Left front	Right rear	Left rear
Condition in visible area OK.				
Wear / damaged (e.g.: score marks, cracks, corrosion, chippings, deeply contoured ridging with steel brake disks)				
Soiled (oil, grease, etc.)				

Set tire pressure in bar or psi

	Front axle	Rear axle	Spare wheel
bar/psi			